



MOUNTAIN BUGGY®

TERRAIN

URBAN

DOUBLE CARRYCOT INSTRUCTIONS

IMPORTANT, KEEP FOR FUTURE REFERENCE

These instructions are for the Double Carrycot, which fits the following model strollers:

Terrain Double - T2204 Terrain Triple - T3204 Urban Double - U2204




⚠ WARNING

- Do not use this Carrycot until you have read and understood the instructions!
- Carrycot is suitable for newborn baby to 6 months, or until baby can sit up unaided.
- Before placing baby into position check that the Carrycot is secure and will not tip or fall.
- Baby must not be in the Carrycot when it is being fastened or removed from the stroller frame.
- The depth from the top of the mattress to the top of the side of the Carrycot at, or at any position within, 300mm/11.8in from the harness attachment points, should not be reduced to less than 140mm/5.5in when the mattress is in position. Mattresses purchased separately should conform to BSI877 part 10.
- Do not use accessories not designed for your stroller as they might be unsafe.
- Do not use the Carrycot to transport children in a motor vehicle.
- Never leave your child unattended.
- The Sunhood and Seat(s) need to be removed from stroller before fitting Carrycot(s). To fit one Carrycot, remove one seat. To fit two Carrycots, remove two seats.
- Store items removed in a dry safe place.

STAGE 1

Removing Sunhood (all three models)

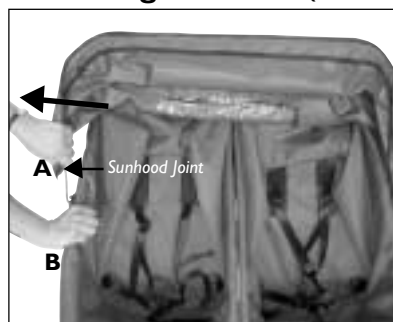

1 Pull support wire out of Sunhood joint **A**. This operation is child proof and therefore requires a degree of force. To assist in pulling support wire out, push against buggy frame with other hand **B**.

2 Repeat step (1) on other side.

3 Unfasten sunhood fabric from stroller frame and seat near handle bar.

- Carrycot(s) can be fitted onto stroller frame onto left and/or right side(s) of stroller, but not in middle of triple stroller.
- If fitting two Carrycots remove left and right seats. If fitting one Carrycot decide before removing seats which side of stroller you want Carrycot fitted to.
- Left and right are determined when standing behind stroller in pushing position.

Removing Seat



- 1** Unfasten seat from frame along side tubes and centre bar.
- 2** On Urban model, unfasten strap underneath seat at point **A**.
- 3** Push seat forward, then slide fabric off seat support wire.
- 4** Remove seat support wire from stroller frame at **B, C, D & E**.

STAGE 2



- To position Carrycot onto right side of stroller, put Snap Locks onto right side of Carrycot and Sliding Plate onto left. To position Carrycot onto left side of stroller, put Snap Locks onto left side of Carrycot and Sliding Plate onto right.
- Left and right are determined when standing at base of Carrycot, looking into Carrycot Sunhood.


Fitting Snap Locks to Carrycot




1 Place one of the Snap Locks over hole **A**. Make sure it is aligned correctly with the hole in Carrycot.

2 Using Allen key, rotate screw in Snap Lock in a clockwise direction until screw is tight. Snap Lock is firmly attached to Carrycot, but can still rotate.

- Follow instructions for your model

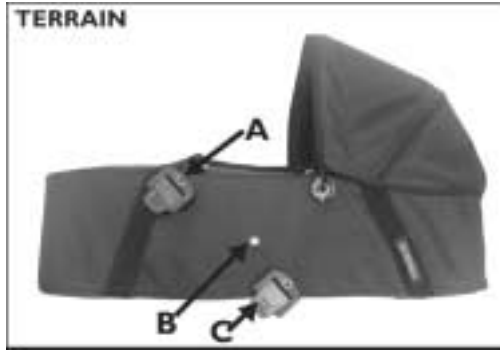


- Repeat steps 1 & 2 to fit Snap Lock to hole C.
- Place one of the screws and cover buttons into hole B. Using Allen Key rotate a screw in a clockwise direction until screw is tight.

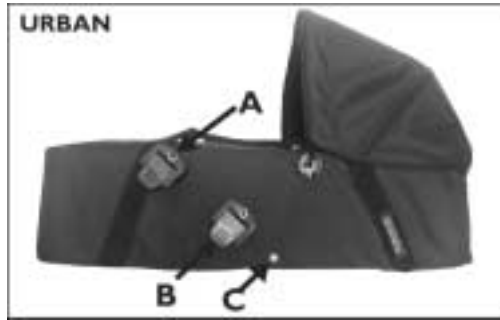

- Repeat steps 1 & 2 to fit Snap Lock to hole B.
- Place one of the screws and cover buttons into hole C. Using Allen Key rotate screw in a clockwise direction until screw is tight.

Fitting Sliding Plate to Carrycot

- Position Sliding Plate on the other side of Carrycot.
- Sliding Plate uses holes A & C in side of Carrycot, hole B is not required.

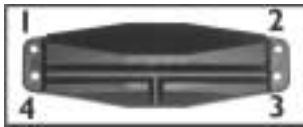

- There are 4 screw holes in Sliding Plate. Using diagrams below locate which two holes are required for your model stroller.



- Align hole 1 of Sliding Plate with hole A of Carrycot. Align hole 2 of Sliding Plate with hole C of Carrycot.

- Place screws into holes 1 & 2. Using Allen Key rotate screws in a clockwise direction until both screws are tight.



- Align hole 1 of Sliding Plate with hole A of Carrycot. Align hole 3 of Sliding Plate with hole C of Carrycot.


- Place screws into holes 1 & 3. Using Allen Key rotate screws in a clockwise direction until both screws are tight.

! WARNING

Using the Allen Key, check that the Snap Locks and Sliding Plate are firmly tightened, and they will not separate from Carrycot.

STAGE 3

Fitting Carrycot to Frame

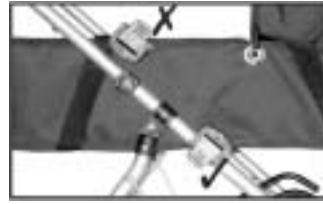


Ensure Snap Locks are rotated so screw holes are on top.



When placing Carrycot, ensure front end of Carrycot is vertically above footplate within shaded zone shown.



- Place Carrycot between side tube and centre bar of stroller.

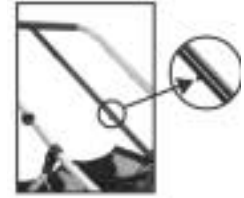


- Locate centre bar lug.




- Slide the Sliding Plate on Carrycot down the centre bar of frame until groove in Sliding Plate locks onto centre bar lug at point Z.

- Open both Snap Locks by lifting levers up.

TERRAIN - Place Snap Lock X directly above sunhood joint.

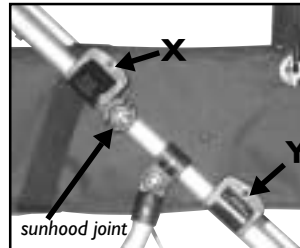

URBAN - Place Snap Lock Y directly above tube joint.

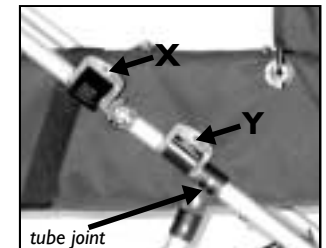

- Push Snap Locks firmly into position, so they butt up to joints indicated in the diagram above for your model.

OPEN POSITION



CLOSED POSITION



- Close the Snap Locks down flat, making sure you hear the lock "click" indicating they are fully locked.

To fit a second Double carrycot onto Double or Triple stroller, follow instructions for stages 2 & 3 again.

! WARNING

- Check Carrycot is horizontal and is located correctly onto stroller frame. Refer back to diagrams for your model to ensure positioning of Snap Locks and Sliding Plate are correct.
- Check Snap Locks are closed and firmly attached to frame and Carrycot will not tip or fall.
- Do not use Carrycot if you are unable to secure. In this case, contact store where stroller was purchased or distributor for your country, for more help.
- Always remove Carrycot(s) before collapsing buggy!

Removing Carrycot from Frame

Open the 2 Snap Locks and lift Carrycot off buggy frame.