



HIGH PERFORMANCE STROLLERS



For Use With:

- **City-Single Stroller**
- **Q-Single Stroller**
- **Pram Accessory**

Car Seat Adapter Kit

*Read these
instructions carefully
before use and
keep them for
future reference.*

*Your child's safety may be
affected if you do not follow
these instructions.*

Kit Includes

This Adapter Kit Includes:

- 1 – U-Shaped Support Bar
- 1 – T-Shaped Support Bar
- 1 – Spring Support Bar
- 1 – Straight Support Bar
- 2 – Adapter Brackets (1 – left, 1 – right)



U-Shaped Support Bar

This will be used to install Peg Perego Primo Viaggio SIP, Graco, Evenflo, and Britax Companion car seats.



Spring Support Bar

This will be used to install only Peg Perego Primo Viaggio SIP.



Straight Support Bar

This will be used to install only Peg Perego Primo Viaggio SIP.



T-Shaped Support Bar

This will be used to install only Britax Companion car seats.



Adapter Brackets

These will be used to install the Pram, Peg Perego Primo Viaggio SIP, Graco, Evenflo, Britax Companion, and Maxi Cosi car seats.

Pram



To install the Pram you will need the following adapter part(s):

2 – Adapter Brackets (**1** – left, **1** – right)

1. Remove the canopy and seat from stroller frame. Please refer to the owner manual. (Be sure to store fabric and hardware for later use.)
2. Secure **Right Adapter Bracket** to frame directly below the folding mechanism making sure to align the notches in the **Adapter Bracket** over the snap and rivets. (Fig. A) Repeat to the left side.(Fig. B)

Note: Do not over tighten. Over tightening will damage the product and void the warranty.

3. Place Pram onto **Adapter Brackets**, making sure child will be facing toward stroller handle. Firmly press down on the Pram until you hear a click which means it's locked in place. (Fig. C)

Note: The Red compression locks and the support bars are not applicable when using the Baby Jogger Pram

4. To remove Pram from the **Adapter Brackets**, press the two buttons on the Pram handle and lift up carefully.
5. To retract canopy, push button on canopy hinge and push canopy back out of the way. To use canopy in the extended position, push button and pull canopy forward.

Note: To avoid safety belt strap catching on wheels, secure them to each other in order to avoid hanging.



(Fig. A)



(Fig. B)



(Fig. C)

Peg Perego Primo Viaggio SIP



To install the Peg Perego Primo Viaggio SIP you will need the following part(s):

- 2 – Adapter Brackets (1 – left, 1 – right)
 - 1 – U-Shaped Support Bar
 - 1 – Spring Support Bar
 - 1 – Straight Support Bar
-


1. Remove the canopy and seat from stroller frame. Please refer to the owner manual. (Be sure to store fabric and hardware for later use.)
2. Secure **Right Adapter Bracket** to frame directly below the folding mechanism making sure to align the notches in the **Adapter Bracket** over the snap and rivets. (Fig. A)
Repeat to the left side. (Fig. B)

Note: Do not over tighten. Over tightening will damage the product and void the warranty.


3. Before tightening **Left Adapter Bracket** to frame, align the **Straight Support Bar** into **Adapter Bracket** hole. (Fig. B)
Once in place tighten **Left Adapter Bracket**. (Fig. B)
4. Open the compression locks by flipping the Red Latches up to allow **U-Shape Support Bar** to be inserted into **Adapter Brackets**. (Fig. C)
5. Insert the **U-Shaped Support Bar** with the curved end pointing down into the **Adapter Brackets**.
6. Insert **Spring Support Bar** into front of **U-Shaped Support Bar** by squeezing in. (Fig. E)
7. Place the car seat onto the **U-Shape Support Bar** making sure that the **Spring** and **Straight Support Bars** engage the locking mechanisms on the Peg Perego car seat. Adjust **U-Shape Support Bar** to proper length by sliding **U-Shape Support Bar** in and out. Use car seat to ensure proper distance. (Fig. C)
Close compression locks by flipping the Red latches down. (Fig. D)
8. Secure the car seat to stroller using **Safety Belt**. (Fig. F)



(Fig. A)

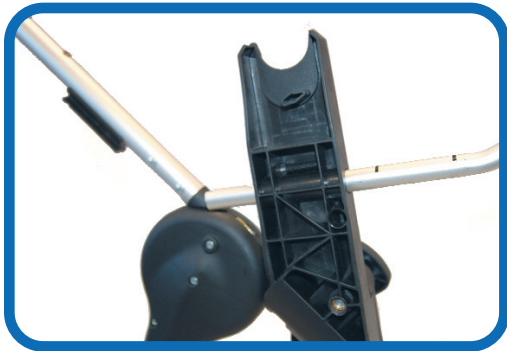

(Fig. B)

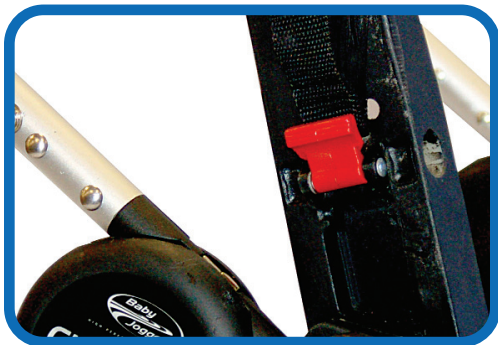

(Fig. C)



(Fig. D)



(Fig. E)



(Fig. F)

Graco/Evenflo Car Seat



To install a Graco/ Evenflo car seat you will need the following adapter part(s):

- 2 – Adapter Brackets (1 – left, 1 – right)
 - 1 – U-Shaped Support Bar
-



1. Remove the canopy and seat from stroller frame. Please refer to the owner manual. (Be sure to store fabric and hardware for later use.)
2. Secure **Right Adapter Bracket** to frame directly below the folding mechanism making sure to align the notches in the **Adapter Bracket** over the snap and rivets. (Fig. A)
Repeat to the left side. (Fig. B)

Note: Do not over tighten. Over tightening will damage the product and void the warranty.

3. Open the compression locks by flipping the Red Latches up to allow **U-Shape Support Bar** to be inserted into **Adapter Brackets**. (Fig. C)
4. Insert the **U-Shaped Support Bar** with the curved end pointing up into the **Adapter Brackets**. (Fig. D)
5. Place car seat onto **U-Shaped Support Bar**. Adjust **U-Shape Support Bar** to proper length by sliding frame in and out. Use car seat to insure proper distance. Close compression locks by flipping the red latches down. (Fig. E)
6. Secure the car seat to stroller using **Safety Belt**. (Fig. F)

Note: The Straight and Spring Support Bars are not applicable when using a Graco or Evenflo car seat.



(Fig. A)




(Fig. D)



(Fig. B)



(Fig. E)

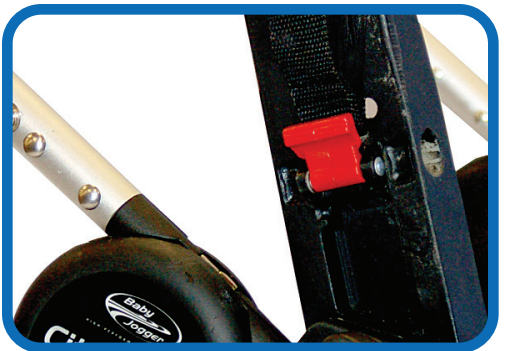

(Fig. C)



(Fig. F)

Britax Companion Car Seat



To install the Britax Companion car seat you will need the following adapter part(s):

- 2 – Adapter Brackets (1 – left, 1 – right)
- 1 – U-Shaped Support Bar
- 1 – T-Shaped Support Bar

1. Remove the canopy and seat from stroller frame. Please refer to the owner manual. (Be sure to store fabric and hardware for later use.)
2. Secure **Right Adapter Bracket** to frame directly below the folding mechanism making sure to align the notches in the **Adapter Bracket** over the snap and rivets. (Fig. A)
Repeat to the left side. (Fig. B)

Note: Do not over tighten. Over tightening will damage the product and void the warranty.

3. Open compression locks by flipping the red latches up. (Fig. B)
4. Insert the **U-Shaped Support Bar** with the curved end pointing up into **Adapter Brackets**. (Fig. D)
5. Place car seat onto **U-Shaped Support Bar**. Adjust **U-Shape Support Bar** to proper length by sliding frame in and out. Use car seat to insure proper distance. Close compression locks by flipping the red latches down. (Fig. E)
6. Place the **T-Bar** onto car seat as shown and tighten strap using D-Ring and Velcro. (Fig. F)
7. Secure the car seat to stroller using **Safety Belt**.

Note: The Straight Support Bar is not applicable when using the Britax Companion car seat.



(Fig. A)




(Fig. D)



(Fig. B)



(Fig. E)

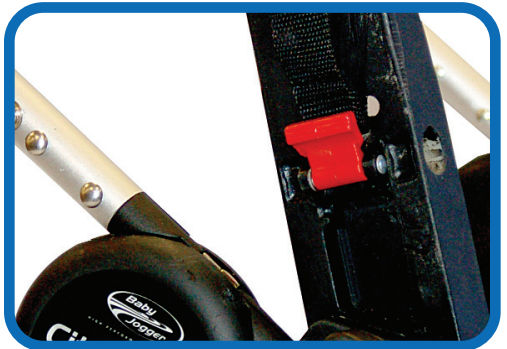

(Fig. C)



(Fig. F)

Maxi Cosi Car Seat



To install the Maxi Cosi car seat you will need the following adapter part(s):


2 – Adapter Brackets (**1** – left, **1** – right)

- 1.** Remove the canopy and seat from stroller frame. Please refer to the owner manual. (Be sure to store fabric and hardware for later use.)
- 2.** Secure **Right Adapter Bracket** to frame directly below the folding mechanism making sure to align the notches in the **Adapter Bracket** over the snap and rivets. (Fig. A)
Repeat to the left side.(Fig. B)

Note: Do not over tighten. Over tightening will damage the product and void the warranty.

- 3.** Place car seat onto the **Adapter Brackets**, making sure the child will be facing toward stroller handle. Firmly press down on the car seat to lock into place. (Fig. C)
- 4.** Secure the car seat to stroller using **Safety Belt**. (Fig. D)

Note: The red compression locks and support bars are not applicable when using the Maxi Cosi car seat.

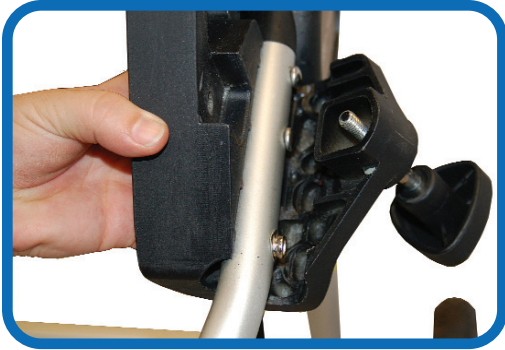

(Fig. A)



(Fig. C)



(Fig. B)



(Fig. D)

Thank You!

Our #1 goal is to make sure you are happy with our product. If you have any comments or suggestions, we would love to hear from you.

1.800.241.1848

CustomerService@babyjogger.com



H I G H P E R F O R M A N C E S T R O L L E R S

Baby Jogger is a Division of Dynamic Brands

8575 Magellan Parkway, Suite 1000 • Richmond, VA 23227

T: 800.241.1848 • F: 804.262.6277

www.babyjogger.com